

# Bell ExpressVu Set-Ups

Stored in Super Buddy Meter

Select Service	Select System	Select LNB	Meter Automatically Selects Switch	LNB Soft Keys			
				LNB 1	LNB 2	LNB 3	LNB 4
Bell ExpressVu	Legacy	Single 91	none	91	-----	-----	-----
		Single 82	none	82	-----	-----	-----
		Legacy Twin	Twin	91	82	-----	-----
		Stacked 91	none	91	-----	-----	-----
		Stacked 82	none	82	-----	-----	-----
		Legacy/SW21	SW21	91	82	-----	-----
		Legacy/SW44	SW42/SW44	91	82	-----	-----
	Dish Pro	Dish Pro 91	none	91	-----	-----	-----
		Dish Pro 82	none	82	-----	-----	-----
		Dish Pro Twin	DpTwin	91	82	-----	-----
		DP Plus Twin	DpTwin	91	82	-----	-----
		DishPro/Dp34	Dp34	91	82	-----	-----
		DishPro/DPP44	DPP44	91	82	-----	-----

Note: N/D means no default

After powering up the Super Buddy and pressing the SYST soft key, the selections shown above are available. Select the appropriate service, system, and LNB for your application. To make selections, arrow up or down to the item to change and press Enter, then arrow up or down to the desired option and press Enter. Press EXIT or DONE to return to the RUN mode. The switch type is automatically entered based on your SYSTEM and LNB selection. After choosing the System and LNB type, connect the Super Buddy to your LNB. Press the LNB soft key to power the LNBs. For multi-sat/LNB systems, use the LNB soft key to power and toggle between the different sats/LNBs. The satellite associated with each LNB selection is shown in the upper left corner of the Super Buddy's LCD screen. For single-sat/LNB systems, use the left/right arrow buttons to select different satellites.

Rev 08/20/2007