

DirectTV Set-Ups

Stored in Super Buddy Meter

Select Service	Select System	Select LNB	Meter Automatically Selects Switch	LNB Soft Keys								
				LNB 1	LNB 2	LNB 3	LNB 4	LNB 5	LNB 6	LNB 7	LNB 8	
DIRECTV	SWM-LNB	SL3s-LNB	none	SWM 101	-----	-----	-----	-----	-----	-----	-----	-----
		SL5s-LNB	Manual	SWM 101	SWM 119	-----	-----	-----	-----	-----	-----	-----
		SWM Ch Verify	none	CH 1-9	-----	-----	-----	-----	-----	-----	-----	-----
	SL3 LNB	SL3 LNB	22kHz	101	99	103	-----	-----	-----	-----	-----	-----
		SL3 w/6x8	DTV6x8	101	99	103	-----	-----	-----	-----	-----	-----
		SL3 w/6x8/72.5/95	DTV6x8	101	99	103	72.5	95	-----	-----	-----	-----
		SL3 w/6x8/72.5	DTV6x8	101	99	103	72.5	-----	-----	-----	-----	-----
		SL3 w/6x8/95	DTV6x8	101	99	103	95	-----	-----	-----	-----	-----
	SL5 LNB	SL5 LNB	22kHz	101	110 & 119	99	103	-----	-----	-----	-----	-----
		SL5 w/6x8	DTV6x8	101	110 & 119	99	103	-----	-----	-----	-----	-----
		SL5 w/6x8/72.5/95	DTV6x8	101	110 & 119	99	103	72.5	95	-----	-----	-----
		SL5 w/6x8/72.5	DTV6x8	101	110 & 119	99	103	72.5	-----	-----	-----	-----
		SL5 w/6x8/95	DTV6x8	101	110 & 119	99	103	95	-----	-----	-----	-----
	Phase III / Sat-C	(N/A)	22kHz	101	110 & 119	-----	-----	-----	-----	-----	-----	-----
	Phase III Stacked	(N/A)	22kHz	101	110 & 119	-----	-----	-----	-----	-----	-----	-----
	Twin Sat 101/119	(N/A)	22kHz	101	119	-----	-----	-----	-----	-----	-----	-----
	Single Sats	Single Sat 72.5	none	72.5	-----	-----	-----	-----	-----	-----	-----	-----
		Single Sat 101	none	101	-----	-----	-----	-----	-----	-----	-----	-----
		Single Sat 110	none	110	-----	-----	-----	-----	-----	-----	-----	-----
		Single Sat 119	none	119	-----	-----	-----	-----	-----	-----	-----	-----
		101 Stacked	none	101	-----	-----	-----	-----	-----	-----	-----	-----
		Int'l 95	none	95	-----	-----	-----	-----	-----	-----	-----	-----
	DIRECTV Lat Am	(N/A)	none	95	-----	-----	-----	-----	-----	-----	-----	-----
	WorldDirect	(N/A)	22kHz	95	101	-----	-----	-----	-----	-----	-----	-----
	SL3 w/B-Band	SL3/B-band	Bband	101	(A band)	(A band)	(B band)	(B band)	-----	-----	-----	-----
		SL3 w/6x8/B-band	DTV6x8/B	101	(A band)	(A band)	(B band)	(B band)	-----	-----	-----	-----
		SL3 w/6x8 B/72/95	DTV6x8/B	101	(A band)	(A band)	(B band)	(B band)	72.5	95	-----	-----
		SL3 w/6x8 B/72.5	DTV6x8/B	101	(A band)	(A band)	(B band)	(B band)	72.5	-----	-----	-----
		SL3 w/6x8 B/95	DTV6x8/B	101	(A band)	(A band)	(B band)	(B band)	95	-----	-----	-----
	SL5 w/B-Band	SL5/B-band	Bband	101	110 & 119	(A band)	(A band)	(B band)	(B band)	-----	-----	-----
		SL5 w/6x8/B-band	DTV6x8/B	101	110 & 119	(A band)	(A band)	(B band)	(B band)	-----	-----	-----
		SL5 w/6x8 B/72/95	DTV6x8/B	101	110 & 119	(A band)	(A band)	(B band)	(B band)	72.5	95	-----
		SL5 w/6x8 B/72.5	DTV6x8/B	101	110 & 119	(A band)	(A band)	(B band)	(B band)	72.5	-----	-----
		SL5 w/6x8 B/95	DTV6x8/B	101	110 & 119	(A band)	(A band)	(B band)	(B band)	95	-----	-----
	MFH-1 systems	MFH-1 basic	DTV6x8	101 odd RH	101 even LH	110 & 119 odd RH	110 & 119 even LH	-----	-----	-----	-----	-----
		MFH-1 w/95	DTV6x8	101 odd RH	101 even LH	110 & 119 odd RH	110 & 119 even LH	95	-----	-----	-----	-----
		MFH-1 w/72.5/95	DTV6x8	101 odd RH	101 even LH	110 & 119 odd RH	110 & 119 even LH	72.5	95	-----	-----	-----
	MFH-2 SWM	SWM-5	none	CH 1-6	-----	-----	-----	-----	-----	-----	-----	-----
		SWM-8	none	CH 1-9	-----	-----	-----	-----	-----	-----	-----	-----
	MFH-2 Riser	Port 1-101 even	none	101 even LH	-----	-----	-----	-----	-----	-----	-----	-----
		Port 1-99A even	none	99 even LH	-----	-----	-----	-----	-----	-----	-----	-----
		Port 2-101 odd	none	101 odd RH	-----	-----	-----	-----	-----	-----	-----	-----
		Port 2-99A odd	none	99 odd RH	-----	-----	-----	-----	-----	-----	-----	-----
		Port 3-119 even	none	119 even LH	-----	-----	-----	-----	-----	-----	-----	-----
		Port 3-103A even	none	103 even LH	-----	-----	-----	-----	-----	-----	-----	-----
		Port 4-119 odd	none	119 odd RH	-----	-----	-----	-----	-----	-----	-----	-----
		Port 4-103A odd	none	103 odd RH	-----	-----	-----	-----	-----	-----	-----	-----
		Port 5 -72.5W	none	72.5	-----	-----	-----	-----	-----	-----	-----	-----
	Port 6-95W	none	95	-----	-----	-----	-----	-----	-----	-----	-----	

After powering up the Super Buddy and pressing the SYST soft key, the selections shown above are available. Select the appropriate service and system for your application. To make selections, arrow up or down to the item to change and press Enter, then arrow up or down to the desired option and press Enter. Press EXIT or DONE to return to the LNB mode. The switch type is automatically entered based on your SYSTEM and LNB selection. After choosing the System and LNB type, connect the Super Buddy to your LNB. Press the LNB soft key to power the LNBs. For multi-sat/LNB systems, use the LNB soft key to power and toggle between the different sats/LNBs. The satellite associated with each LNB selection is shown in the upper left corner of the Super Buddy's LCD screen. For single-sat/LNB systems, use the left/right arrow buttons to select different satellites.