

Dish Network Set-Ups

Stored in Super Buddy Meter

| Select Service | Select System | Select LNB | Meter Automatically Selects Switch | LNB Soft Keys | | | |
|----------------|-------------------|----------------------|--|---------------|-------|-------|-------|
| | | | | LNB 1 | LNB 2 | LNB 3 | LNB 4 |
| Dish Network | Dish 1000 | Dish 1000 | DpPlus | 119 | 110 | 129 | ----- |
| | | Dish 1000 / 61.5 | DpPlus | 119 | 110 | 129 | 61.5 |
| | | Dish 1000 / 72.7 | DpPlus | 119 | 110 | 129 | 72.7 |
| | | Dish 1000 / 77 | DpPlus | 119 | 110 | 129 | 77 |
| | | Dish 1000 / 118.7 | DpPlus | 119 | 110 | 129 | 118.7 |
| | | Dish 1000 / 121 | DpPlus | 119 | 110 | 129 | 121 |
| | Dish Pro Plus | DP Plus / Twin | Dp Twin | 119 | 110 | ----- | ----- |
| | | DP Plus / 61.5 | DpPlus | 119 | 110 | 61.5 | ----- |
| | | DP Plus / 72.7 | DpPlus | 119 | 110 | 72.7 | ----- |
| | | DP Plus / 77 | DpPlus | 119 | 110 | 77 | ----- |
| | | DP Plus / 118.7 | DpPlus | 119 | 110 | 118.7 | ----- |
| | | DP Plus / 121 | DpPlus | 119 | 110 | 121 | ----- |
| | | DP Plus / 129 | DpPlus | 119 | 110 | 129 | ----- |
| | Dish Pro | DP Twin | DpTwin | 119 | 110 | ----- | ----- |
| | | Dish 500 / 61.5 | Dp34 | 119 | 110 | 61.5 | ----- |
| | | Dish 500 / 72.7 | Dp34 | 119 | 110 | 72.7 | ----- |
| | | Dish 500 / 77 | Dp34 | 119 | 110 | 77 | ----- |
| | | Dish 500 / 118.7 | Dp34 | 119 | 110 | 118.7 | ----- |
| | | Dish 500 / 121 | Dp34 | 119 | 110 | 121 | ----- |
| | | Dish 500 / 129 | Dp34 | 119 | 110 | 129 | ----- |
| | Dish 500+ | Dish 500+ DP34/DPP33 | Dp34 | 119 | 110 | 118.7 | ----- |
| | | Dish 500+ DPP44 | DPP44 | 119 | 110 | 129 | 118.7 |
| | Dish 1000+ | (N/A) | DPP44 | 119 | 110 | 129 | 118.7 |
| | Dish 1000+/61.5 | (N/A) | DPP44 | 119 | 110 | 61.5 | 118.7 |
| | Dish 1000.2 | 1000.2 | DpPlus | 119 | 110 | 129 | ----- |
| | | 1000.2 / 61.5 | DpPlus | 119 | 110 | 129 | 61.5 |
| | | 1000.2 / 72.7 | DpPlus | 119 | 110 | 129 | 72.7 |
| | | 1000.2 / 77 | DpPlus | 119 | 110 | 129 | 77 |
| | | 1000.2 / 118.7 | DpPlus | 119 | 110 | 129 | 118.7 |
| | | 1000.2 / 121 | DpPlus | 119 | 110 | 129 | 121 |
| | Dish500 Legacy | Twin Legacy | Twin | 119 | 110 | ----- | ----- |
| | | Legacy / sw21 | SW21 | 119 | 110 | ----- | ----- |
| | | Legacy / sw42 | SW42/44 | 119 | 110 | ----- | ----- |
| | | Leg / sw64 61.5 | SW64 | 119 | 110 | 61.5 | ----- |
| | | Leg / sw64 129 | SW64 | 119 | 110 | 129 | ----- |
| | Super Dish | Super 121 | Dp34 | 119 | 110 | 121 | ----- |
| | | Super 121 / 61.5 | DPP44 | 119 | 110 | 61.5 | 121 |
| | | Super 121 / 129 | DPP44 | 119 | 110 | 129 | 121 |
| | DP Single | Orbital 61.5 | none | 61.5 | ----- | ----- | ----- |
| | | Orbital 72.7 | none | 72.7 | ----- | ----- | ----- |
| | | Orbital 77 | none | 77 | ----- | ----- | ----- |
| | | Orbital 110 | none | 110 | ----- | ----- | ----- |
| | | Orbital 119 | none | 119 | ----- | ----- | ----- |
| | | Orbital 129 | none | 129 | ----- | ----- | ----- |
| | FSS Single | FSS 118.7 | none | 118.7 | ----- | ----- | ----- |
| | | FSS 121 | none | 121 | ----- | ----- | ----- |
| | Legacy Single | Orbital 61.5 | none | 61.5 | ----- | ----- | ----- |
| | | Orbital 72.7 | none | 72.7 | ----- | ----- | ----- |
| | | Orbital 77 | none | 77 | ----- | ----- | ----- |
| | | Orbital 110 | none | 110 | ----- | ----- | ----- |
| | | Orbital 119 | none | 119 | ----- | ----- | ----- |
| | | Orbital 129 | none | 129 | ----- | ----- | ----- |
| | | 110 Stacked | none | 110 | ----- | ----- | ----- |
| | | 119 Stacked | none | 119 | ----- | ----- | ----- |
| | 1000.4 E. Arc | 1000.4 Triple | DpPlus | 72.7 | 61.5 | 77 | ----- |
| | | 1000.4 Triple/110 | DpPlus | 72.7 | 61.5 | 77 | 110 |
| | | 1000.4 Triple/119 | DpPlus | 72.7 | 61.5 | 77 | 119 |
| | | 1000.4 Triple/118.7 | DpPlus | 72.7 | 61.5 | 77 | 118.7 |
| | | 1000.4 Triple/121 | DpPlus | 72.7 | 61.5 | 77 | 121 |
| | | 1000.4 Triple/129 | DpPlus | 72.7 | 61.5 | 77 | 129 |
| | Dpp500+/Dpp 1000+ | Dpp500+/1000+ | DpLNB | 119 | 110 | 118.7 | ----- |
| | | Dpp500+/1000+/129 | DpLNB | 119 | 110 | 118.7 | 129 |
| | | Dpp500+/1000+/61.5 | DpLNB | 119 | 110 | 118.7 | 61.5 |
| | | Dpp500+/1000+/77 | DpLNB | 119 | 110 | 118.7 | 77 |

After powering up the Super Buddy and pressing the SYST soft key, the selections shown above are available. Select the appropriate service, system, and LNB for your application. To make selections, arrow up or down to the item to change and press Enter, then arrow up or down to the desired option and press Enter. Press EXIT or DONE to return to the RUN mode. The switch type is automatically entered based on your SYSTEM and LNB selection. After choosing the System and LNB type, connect the Super Buddy to your LNB. Press the LNB soft key to power the LNBs. For multi-sat/LNB systems, use the LNB soft key to power and toggle between the different sats/LNBs. The satellite associated with each LNB selection is shown in the upper left corner of the Super Buddy's LCD screen. For single-sat/LNB systems, use the left/right arrow buttons to select different satellites.