

# Generic Set-Ups

Stored in Super Buddy Meter

Select Service	Select System	Select LNB	Meter Automatically Selects Switch	LNB Soft Keys			
				LNB 1	LNB 2	LNB 3	LNB 4
Generic C Band	C-Band H/V 3.7-4.2	N/A	none	N/D	----	----	----
	C-Band Cir 3.7-4.2	N/A	none	N/D	----	----	----
	C-Band H/V 3.4-4.2	N/A	none	N/D	----	----	----
	C-Band Cir 3.4-4.2	N/A	none	N/D	----	----	----
	C-Band Stacked	N/A	none	N/D	----	----	----
	Generic Ku Band	Std N.Am Ku 10.75	N/A	none	N/D	----	----
	Sngl Pol Ku 10.75	N/A	none	N/D	----	----	----
	Ku Circ 11.7 : 12.2	N/A	none	N/D	----	----	----
	Ku Circ 12.2:12.7	N/A	none	N/D	----	----	----
	Universal	N/A	none	N/D	----	----	----
	Ku Stacked	N/A	none	N/D	----	----	----
	Zinwell ZKF-Q21	N/A	none	N/D	----	----	----
	Monoblock 97/93	N/A	Di Comm	97	93	----	----
	Monoblock 101/97	N/A	Di Comm	101	97	----	----
	Other	Ku, LO=9.75	none	N/D	----	----	----
		Ku, LO=10.0	none	N/D	----	----	----
		Sngl Pol Ku,LO=10	none	N/D	----	----	----
		Ku, LO=10.05	none	N/D	----	----	----
		Ku, LO=10.6	none	N/D	----	----	----
	Ku, LO=10.7	none	N/D	----	----	----	
	Ku, LO=11.3	none	N/D	----	----	----	

note: N/D means no  
default

After powering up the Super Buddy and pressing the SYST soft key, the selections shown above are available. Select the appropriate service and system for your application. To make selections, arrow up or down to the item to change and press Enter, then arrow up or down to the desired option and press Enter. Press EXIT or DONE to return to the RUN mode. The switch type is automatically entered based on your SYSTEM and LNB selection. After choosing the System and LNB type, connect the Super Buddy to your LNB. Press the LNB soft key to power the LNBs. For multi-sat/LNB systems, use the LNB soft key to power and toggle between the different sats/LNBs. The satellite associated with each LNB selection is shown in the upper left corner of the Super Buddy's LCD screen. For single-sat/LNB systems, use the left/right arrow buttons to select different satellites.

Rev 07/10/2008