



How To Create a Channel Plan for the XR-3 Cable Air Meter Module For the T Channels

- 1) Power on the XR-3 while the Cable-Air module is inserted into it.
- 2) Press MENU soft-key (located near bottom right corner of screen)
- 3) Highlight "Channel Plans", using the up/down arrow buttons, and press Enter
- 4) Highlight the "EIASTD ANLG" channel plan, using the up/down arrow buttons, and press the EDIT/CREATE soft-key (located near top right corner of LCD screen)
- 5) On the Channel Plan File Summary screen, type in a Filename (i.e. "T CHANNELS") and press Enter. Fill in the Location and Technician fields if desired.
- 6) Press the Next soft-key (located near center right area of LCD screen)
- 7) Press the Insert soft-key.
- On the Channel Parameter's screen:
- 8) In the Channel Number field, type "T7" using the alphanumeric keypad and then press Enter
- 9) In the Frequency field, type "7.000" using the alphanumeric keypad and then press Enter
- 10) Press Back soft-key
- 11) Press the Insert soft-key.
- On the Channel Parameter's screen:
- 12) In the Channel Number field, type "T8" using the alphanumeric keypad and then press Enter
- 13) In the Frequency field, type "13.000" using the alphanumeric keypad and then press Enter
- 14) Press Back soft-key
- 15) Press the Insert soft-key.
- On the Channel Parameter's screen:
- 16) In the Channel Number field, type "T9" using the alphanumeric keypad and then press Enter
- 17) In the Frequency field, type "19.000" using the alphanumeric keypad and then press Enter
- 18) Press Back soft-key
- 19) Press the Insert soft-key.
- On the Channel Parameter's screen:
- 20) In the Channel Number field, type "T10" using the alphanumeric keypad and then press Enter
- 21) In the Frequency field, type "25.000" using the alphanumeric keypad and then press Enter
- 22) Press Back soft-key
- 23) Press the Insert soft-key.
- On the Channel Parameter's screen:
- 24) In the Channel Number field, type "T11" using the alphanumeric keypad and then press Enter
- 25) In the Frequency field, type "31.000" using the alphanumeric keypad and then press Enter
- 26) Press Back soft-key
- 27) Press the Insert soft-key.
- On the Channel Parameter's screen:
- 28) In the Channel Number field, type "T12" using the alphanumeric keypad and then press Enter
- 29) In the Frequency field, type "37.000" using the alphanumeric keypad and then press Enter
- 30) Press Back soft-key
- 31) Press the Insert soft-key.
- On the Channel Parameter's screen:
- 32) In the Channel Number field, type "T13" using the alphanumeric keypad and then press Enter
- 33) In the Frequency field, type "43.000" using the alphanumeric keypad and then press Enter



Application Note

10/3/2018



34) Press Back soft-key

35) Press the Insert soft-key.

On the Channel Parameter's screen:

36) In the Channel Number field, type "T14" using the alphanumeric keypad and then press Enter

37) In the Frequency field, type "49.000" using the alphanumeric keypad and then press Enter

38) Press Back soft-key

39) Highlight each of the non T channels and press the Delete soft-key to delete each row of non T-channels, one by one. Unfortunately, this is tedious and will take a couple minutes to complete to delete the 158 channels that were in the EIASTD ANLG channel plan. Please note that the T channels you just created will be at the bottom of the list, so be careful not to delete them.

40) Press the Back soft-key (located near the bottom right corner of the screen) to return to the Channel Plan File Summary screen.

41) Press the Save soft-key (located near top right corner of the screen).

Rev 3 October 2018

